

User's Manual CombiStar 7250 pro

Security note


- In the interest of security, change the factory CODE **1 2 3 4 5 6** immediately after installation.
- Never use data, such as a birthday, which others could deduce from personal information about you when choosing your CODE.
- Once the new CODE has been entered, and with the door open, lock and unlock the electronic lock several times using your PIN and the new CODE.
- An entry can be canceled by pressing the  button.
- Attention! Don't turn key pad with a higher power than 10 Nm.



Please specify an individual who will manage the lock. This individual is the **"master user"** and is assigned **PIN 0** (PIN = Personal Identification Number).

Additional **users** are assigned **PIN 1 to 9** (a maximum of 9 users can be set up.) Activations and deletions can be made only by the **master user**.

1. Opening the lock

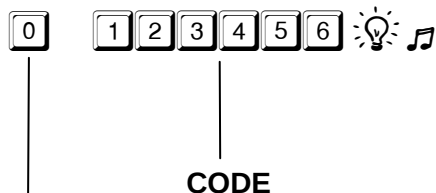

CODE

PIN for master user = , for users 1 to 9 =  to 

Correct **CODE** must be **entered twice in sequence** when:

There has been an interruption of power supply, such as when changing battery or after entering more than four times a wrong code.

After entering the CODE, open the electronic lock within 10 seconds by rotating the keypad; otherwise the electronic lock will close automatically.



If incorrect CODES are entered four times in sequence, then a 10-second penalty time-out period will start running. See Page 7, >Optical and acoustic signals<.

Optical and acoustic signals while entering the PIN and the CODE	
 Sequence of signals after the PIN has been entered.	Lock is closed: • A timer program is running. • Lock has been disabled by the master user. • Lock has been disabled by the burglar alarm system associated with the safe.
 Sequence of signals after the CODE has been entered.	Invalid CODE entered. Enter PIN and CODE again.
Green  blinks once per second.	Open the electronic lock within 10 seconds by rotating the keypad.



**Electronic lock
CLOSED**




**Electronic lock
OPEN**



2. Closing the electronic lock

The electronic lock will engage automatically 10 seconds after it is opened.

To finally lock the safe it will be necessary to rotate the keypad once again into its "home" position.

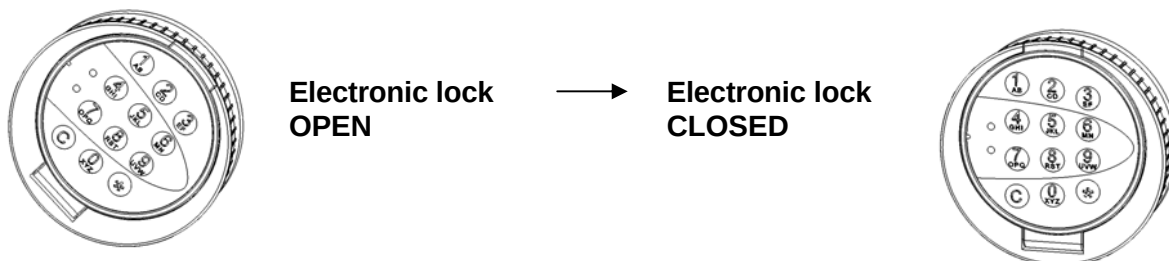

Before leaving the safe it is absolutely necessary to rotate the keypad several times to ensure that the electronic lock is closed properly.


Attention!

After opening to begin the programming within 10 sec.

3. Changing the master CODE (start within 10 seconds after opening the lock):

* 0 *

1 2 3 4 5 6



Enter old master CODE

6 5 4 3 2 1



Enter new master CODE (example given here)

6 5 4 3 2 1



Repeat new master CODE

3.1 Creating / changing a user CODE (start within 10 seconds after opening the lock):


A maximum of 9 CODES can be set up.

* 1 *

1 *

1 PIN for user 1 through to 9 PIN for user 9

6 5 4 3 2 1



Master CODE (example shown here)

/When changing, enter user's old CODE

3 4 5 6 7 8



New user CODE (example given here)

3 4 5 6 7 8



Repeat new user CODE

3.2 Deleting the user's CODE (start within 10 seconds after opening the lock):




Whenever a CODE interlock is activated, then it is impossible to delete all user CODES; at least one user CODE will have to be programmed.

* 1 *

1 *

1 for user 1 PIN through 9 for user 9 PIN

1 2 3 4 5 6



Master CODE (example shown here)

*



Delete

3.3 Activating dual code function (start within 10 seconds after opening the lock):

 Once this function has been activated the electronic lock can be opened only by entering 2 PINs and 2 CODES.

Master CODE (example shown here)

Activate

3.4 Deleting dual code function (start within 10 seconds after opening the lock):

Master CODE (example shown here)

Delete

3.5 Open with dual code



 e.g. user 1 PIN, to  for user 9 PIN



User CODE (example shown here)



Green LED lights



 e.g. user 2 PIN, to  for user 9 PIN


     

User CODE (example shown here)

Space for user's notes:

Timed delay and release period

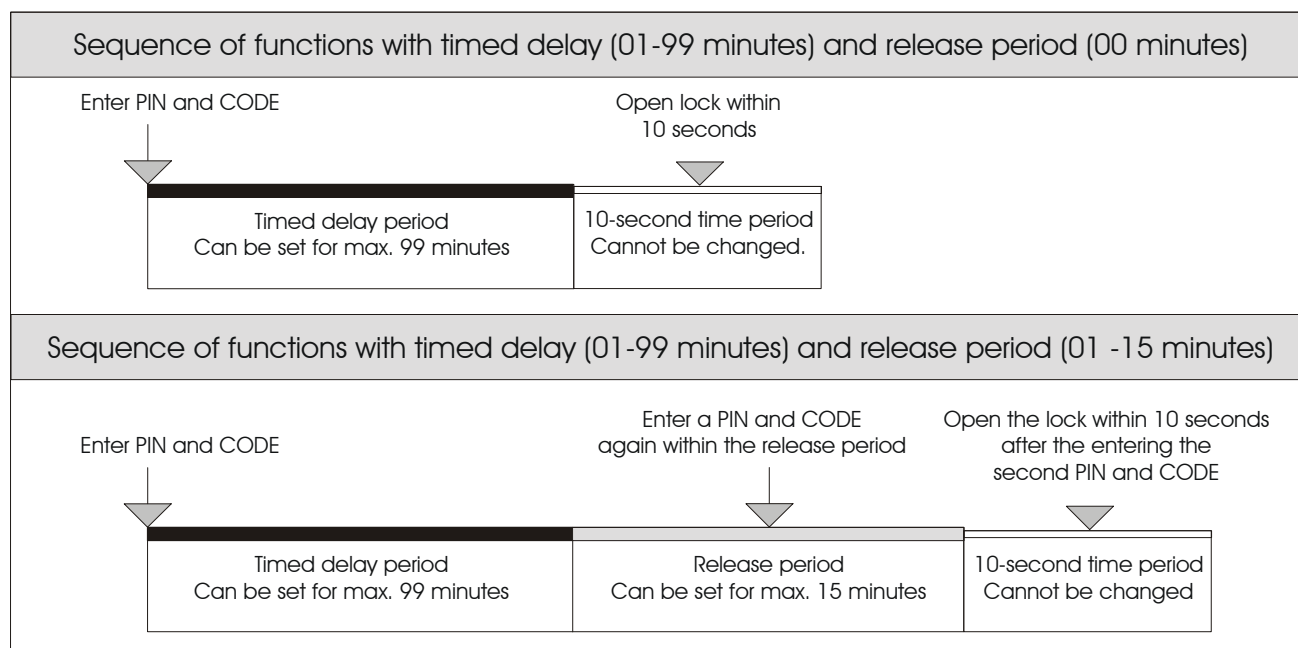

3.6 Setting the timed delay and release period

(start within 10 seconds after opening the lock):

* 3 *

6 5 4 3 2 1



Master CODE (example shown here)

0 1 *



Timed delay (from 0 1 * for 1 minute to 9 9 * for 99 minutes)

0 1 *




Release period (from 0 1 * for 1 minute to 1 5 * for 15 minutes)
No release period if 0 0 * is entered

3.7 Deleting the timed delay and release period

(start within 10 seconds after opening the lock):

* 3 *

6 5 4 3 2 1



Master CODE (example shown here)

0 0 *



Delete timed delay

0 0 *



Delete release period

3.8 Opening with timed delay and release period

		 e.g. user 1 PIN, to  for user 9 PIN
     		User CODE (example shown here)
	Green 	blinks every 5 seconds
	15 x 	Timed delay elapsed, Start of release period,
		 e.g. user 1 PIN, to  for user 9 PIN
     	 	User CODE (example shown here) Lock cleared for opening

3.9 Disabling the lock (only with the electronic lock closed):

 The lock remains disabling until the master user rescinds the instruction.

  		
     	 	Master CODE (example shown here)
 	 	Lock disabled

3.10 Enable the lock (only with the electronic lock closed):

  		
     	 	Master CODE (example shown here)
 	 	Lock enabled

3.11 Setting the date and time

 Enter the date and time without any punctuation.
 Entries for weekdays: 0 = Monday / 1 = Tuesday / 2 = Wednesday / 3 = Thursday
 / 4 = Friday / 5 = Saturday / 6 = Sunday

  		
     	 	Master CODE (example shown here)
     		Date, e.g. 15.12.05
   		Time of day e.g. 15:00
 	 	Day of week e.g. 2 = Wednesday

4. Additional operations can be realized in combination with CombiXT- Box and a parameterization set.:

Function	Required accessories	
	CombiXT-Box	Parameterization Set CombiComm
Event memory (256 events including date and time)	-	●
silent alarm	●	-
external release	●	-
open-/close-signal	●	-
blocking element –function	●	-
mains power supply	●	-

● required

- not required

Programming available by means of PC-Software of Parameterization-set CombiComm
Time-Program
Dual Code (4-eay principal)
I/O-function (e.g. silent alarm, Audit trail)
Time delay - / release period
Date / Time

The CombiXT-Box and the parameterization set CombiComm can be purchased at:

Carl Wittkopp GmbH
Sternbergstraße 5
42551 Velbert

Telefon +49(0)2051 9566 0
Telefax +49(0)2051 9566 66
info@carl-wittkopp.com
www.carl-wittkopp.com

Optical and acoustic signals

Signal	Reason	Comment
 Green once	Valid CODE entered properly.	
 Red and 12 times 	Incorrect CODE entered.	If four incorrect CODES are entered in sequence, then a 10-second penalty time-out period starts. Each additional incorrect entry will extend the penalty time-out by 10 seconds. The penalty time-out period cannot be interrupted!
 Green and 2 times 	Change accepted.	The change in the CODE or activation/deactivation of the supplementary function was carried out properly.
 Red and 12 times 	Invalid change.	The change in the CODE or activation/deactivation of the supplementary function was not carried out properly. Repeat procedure.
 Green blinks every 5 seconds	Timed delay period is running.	The electronic lock will not respond to any keypad entries during the timed delay period.
15 times  and  green	Release period is running. (Timed delay period has elapsed).	Opening with timed delay and release period, see 3.8
 Red blinks every 5 seconds	Penalty time-out is running.	The penalty time-out period cannot be interrupted!
 Green and 2 times 	Penalty time-out has elapsed.	The electronic lock can now be opened by entering the correct CODE.
 Red and green blink alternately 10 times and 10 times 	Battery charge – Warning.	2 x 1.5 V MICRO (AAA) batteries Replace the type AAA batteries (do not use rechargeable batteries) in the near future. CODES will be retained when changing batteries. Enter the CODE twice after changing the batteries.
 Green and once  , then  Red and once 	Keyboard has been tampered with or replaced; battery compartment has been opened.	The PIN and CODE will have to be entered once again to open the electronic lock.

We can assume no liability for malfunctions resulting from improper use, application of force or improper treatment or for the loss of property or assets which are due, for example, to not properly closing the door for the safe.

If it is not possible to open the safe even though the instructions above have been followed, then kindly contact the manufacturer of the safe.